
12. Adjustment

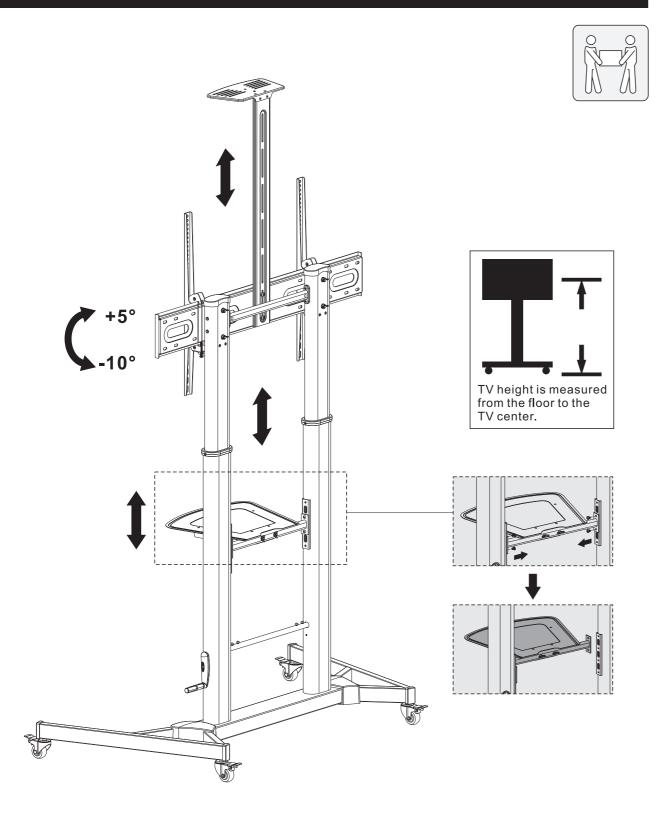

Note: It is recommended to adjust the columns to the desired height before installing the display.

- Check if the bracket is secure and safe to use at regular intervals(at least every three months).
 Please contact your distributor if you have any questions.



TV Cart

 


WARNING: EXCEEDING THE WEIGHT CAPACITY CAN RESULT IN SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT!



INSTALLATION MANUAL













⚠ WARNING

- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your point of purchase.
- This mounting bracket was designed to be installed and utilized ONLY by following the instruction of this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with professional mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the product ,which largely reduces weight capacity.
- This product is for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Requirement for Installation





Parts Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts miss or isn't correctly provided, contact your point of purchase for a replacement.







base (x1)




connecting pieces (x2)

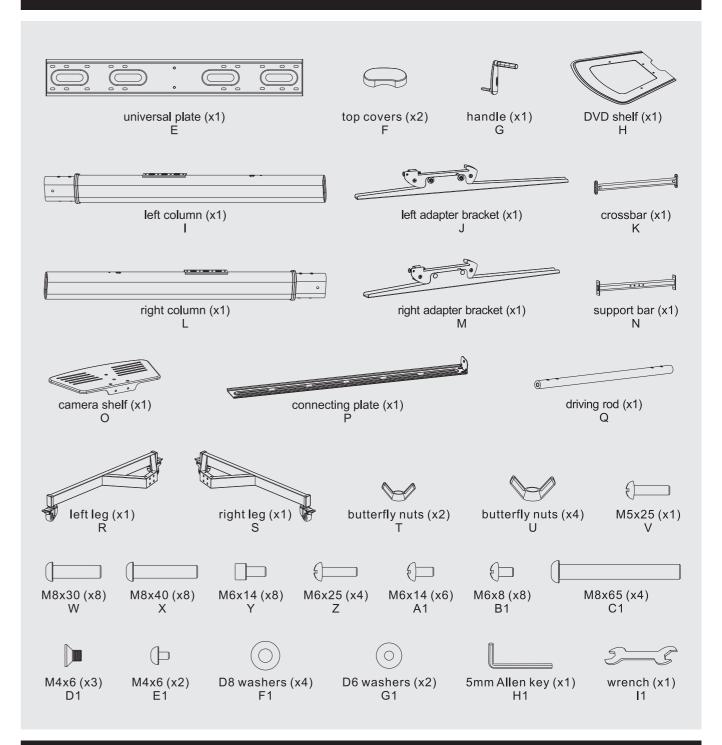


Package M

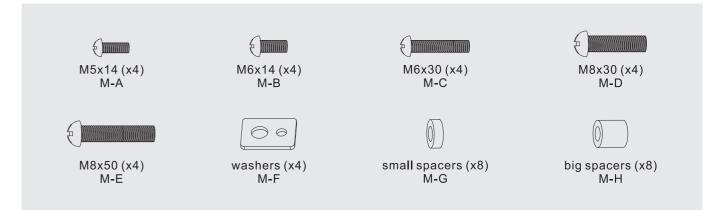

1. Assembling the Base

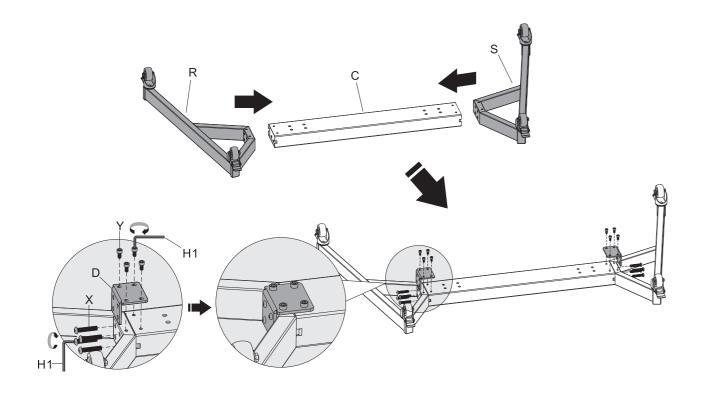


Insert the right leg into the base. Align the holes on the right leg to the holes on the base. Fix the base with the connecting pieces and the screws. Repeat this step for the left leg.

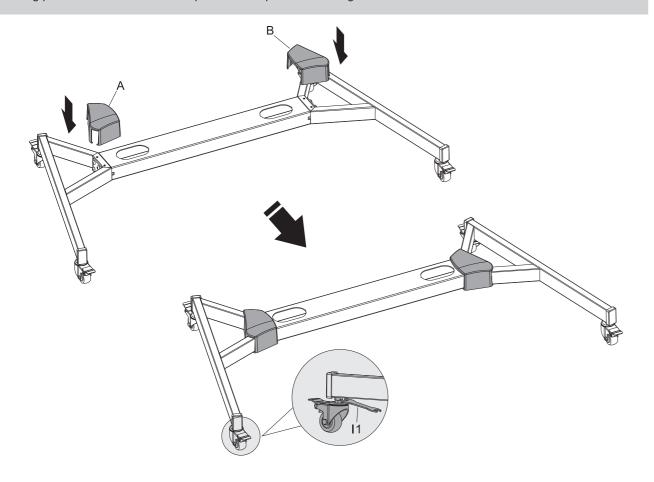

NOTE: Lock the brakes on the casters to avoid any unexpected movements during installation. Each caster can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.

2. Adjusting the Columns

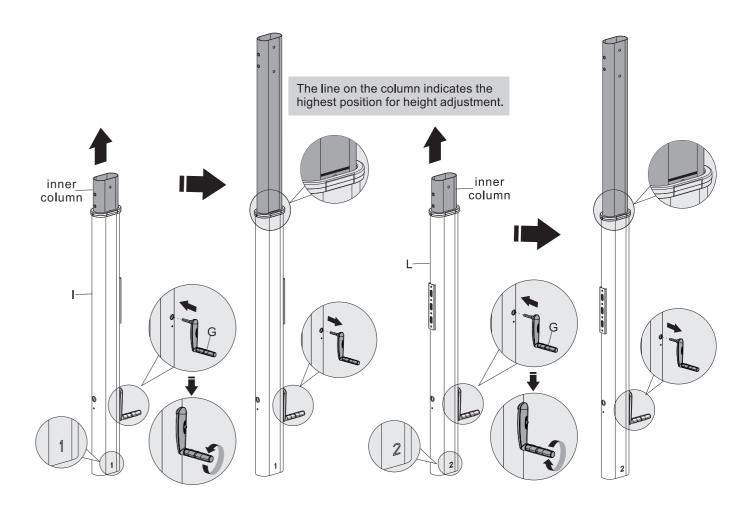


Attach the handle to the column marked with "1". Attach the handle to the column marked with "2".


Turn the handle to make the inner column run upwards to the highest position.

NOTE: With the "1" and "2" mark facing forward.


3. Attaching the Driving Rod to the Two Columns

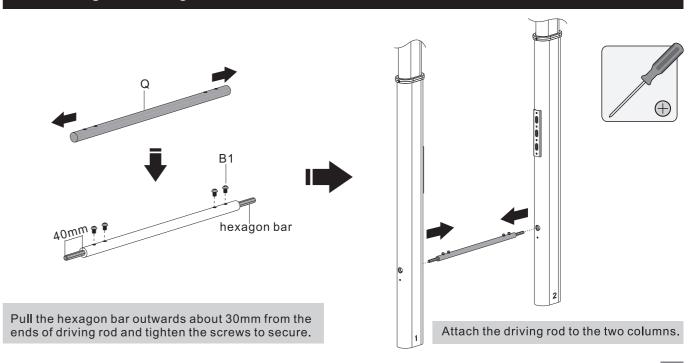


4. Attaching the Columns to the Base

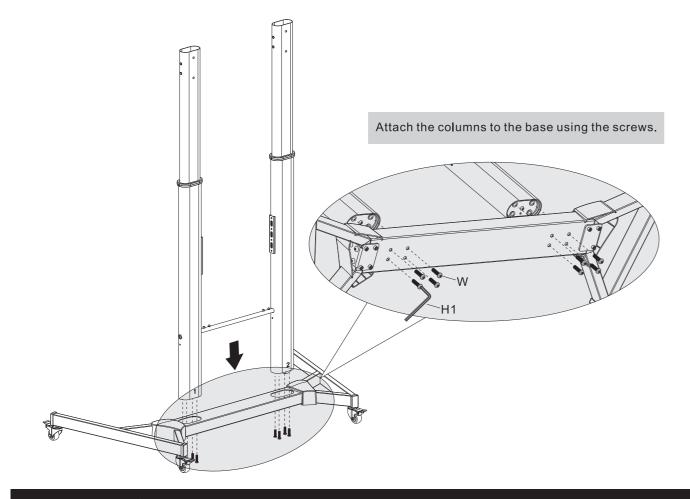


5. Installing the Crossbar

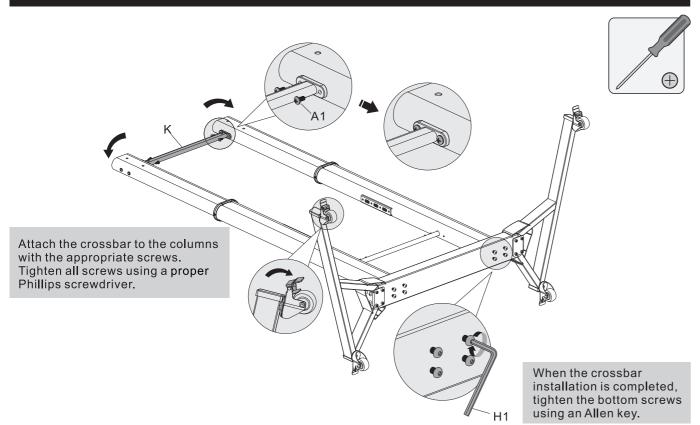


6. Installing the Universal Plate

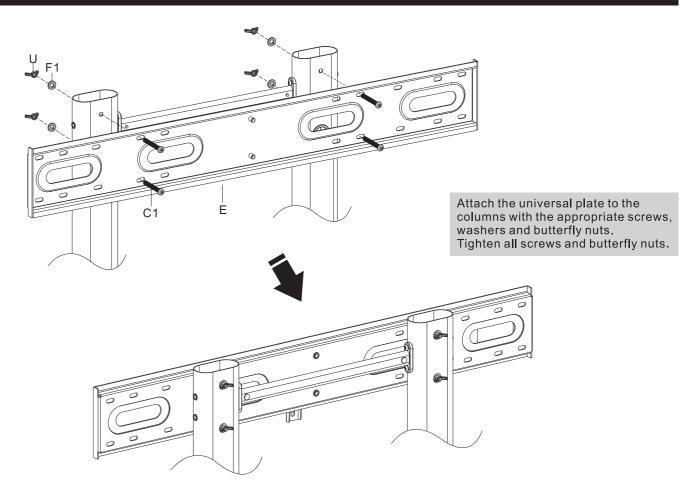


7. Adjustment

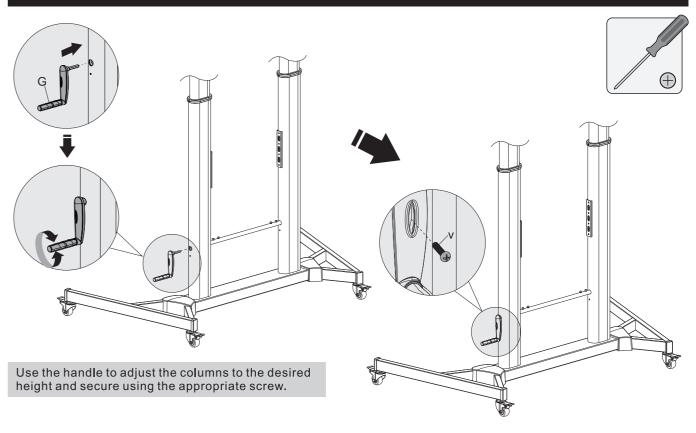


8. Installing the Adapter Brackets

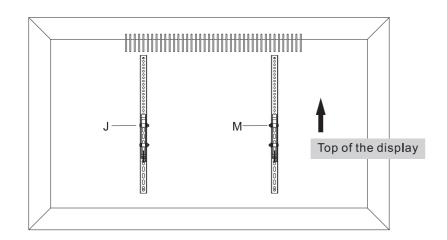


8a. For Flat Back Screens

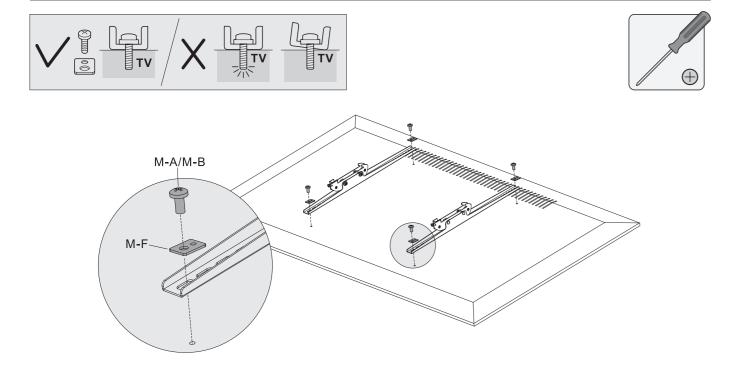

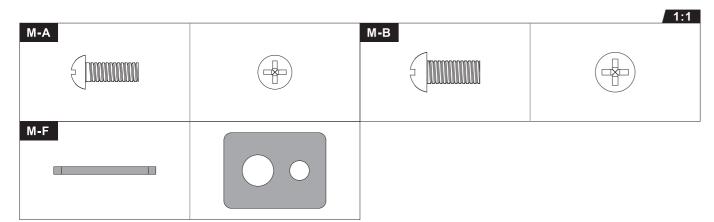


8b. For Screens with Irregular Back

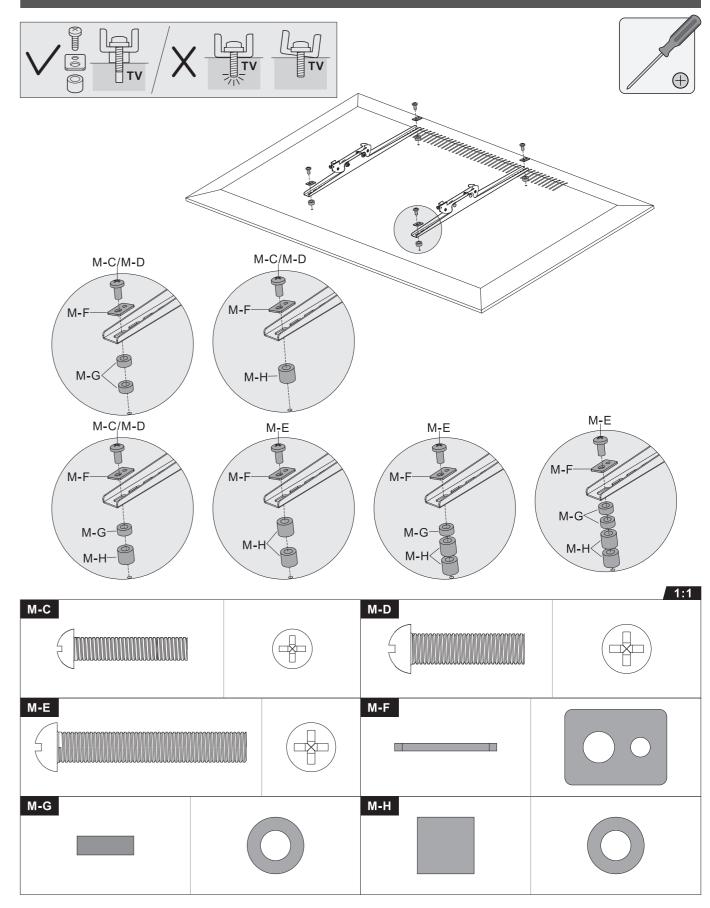

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
Position the adapter brackets as close as possible to the center of the display.
Screw the adapter brackets onto the display.


Tighten all screws but do not over tighten.

9. Hooking the Display onto the Universal Plate

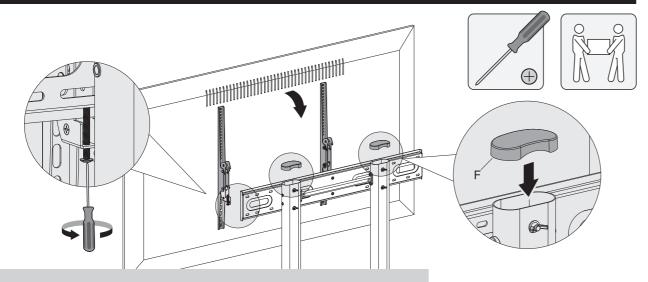


- · Hook the display onto the universal plate.
- Tighten the bottom screws to secure them.
- **IMPORTANT:** Make sure the display is mounted correctly and the screws are tightened safely before releasing the display.


10. Installing the Camera Shelf

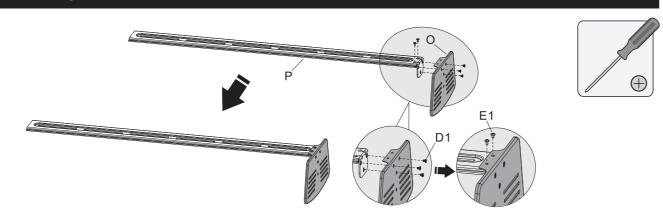

Attach the camera shelf to the connecting plate with the appropriate screws. Tighten all screws using a proper Phillips screwdriver.

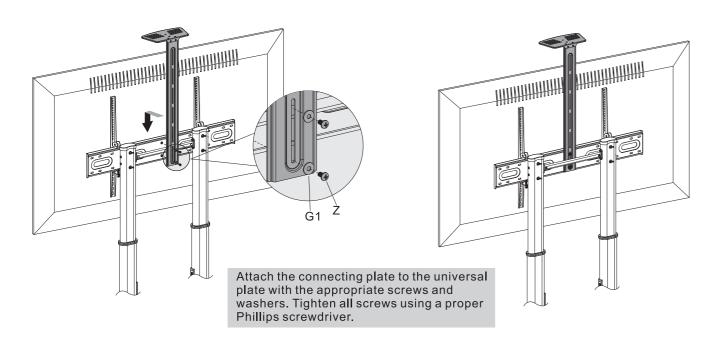

11. Installing the DVD Shelf

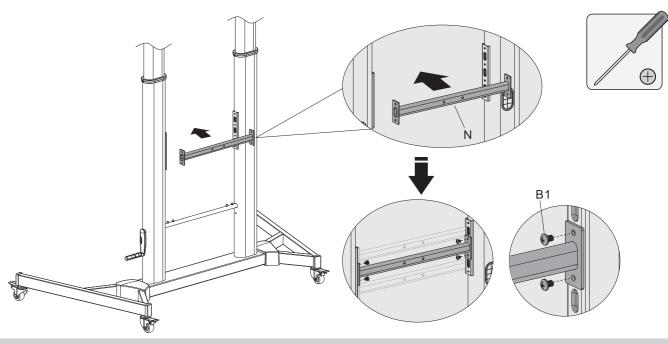

Install the support bar to the columns at the desired position and secure using the appropriate screws.

